

Champion Index Controller



Quick Reference Guide Rev D

For Models:

Superior Champion L12 Lug Conveyor Superior Champion L16 Lug Conveyor

Included:

- 1. Main Controller Box.
- 2. Flexible Sensor Assy. (Mounted to sense stop position-typically under the conveyor and sensing the conveyor lugs as they pass by)


Run MODE Functions:

- 1. CONT Run MODE.
 - [Conveyor will run continuously upon receiving a start command from the GREEN start pushbutton, and will stop at a controlled stop position (Lug sensor) when the RED pushbutton is activated]
- 2. INDEX Run MODE.
 - [Conveyor will run upon receiving a start command from the GREEN start pushbutton until the Lug Sensor sees a lug, then the conveyor will stop and hold until the INDEX HOLD TIMER reaches it's value. The cycle will repeat itself until the RED pushbutton is activated at which the conveyor will stop at a controlled stop position

Basic Controls and I/O:

- 1. E-STOP Button: (Cuts conveyor power immediately)
- 2. START Button: (Starts conveyor Line)
- 3. STOP Button: (Stops conveyor Line at a position stop)
- 4. ON/OFF Switch: (Turns Conveyor power on)
- 5. CONT/INDEX Switch: (Sets Run MODE as noted above)
- 6. Index Hold Timer: (Sets the hold time between Index Cycles; Located in electrical cabinet)
- 7. Speed Control: (Sets Conveyor Run Speed; Located in electrical cabinet)
- 8. LUG SENSOR PLUG: (Plug connection for Flexible Sensor Assembly)
- 9. FDR I/O PLUG: (Plug connection for Feeder see panel schematic, page 2 for explanation)
- 10. FDR FLT BYPASS: (Bypasses Feeder fault monitoring)
- 11. EXTERNAL I/O: (Plug connection for Remote Conveyor control see panel schematic, page 2 for explanation)

Panel Schematic - page 1

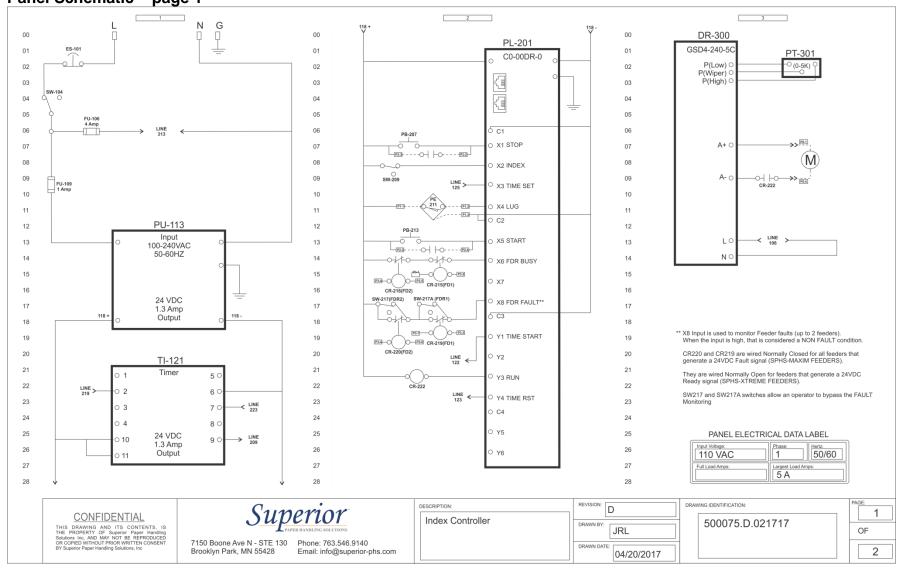

Panel Schematic - page 2

